


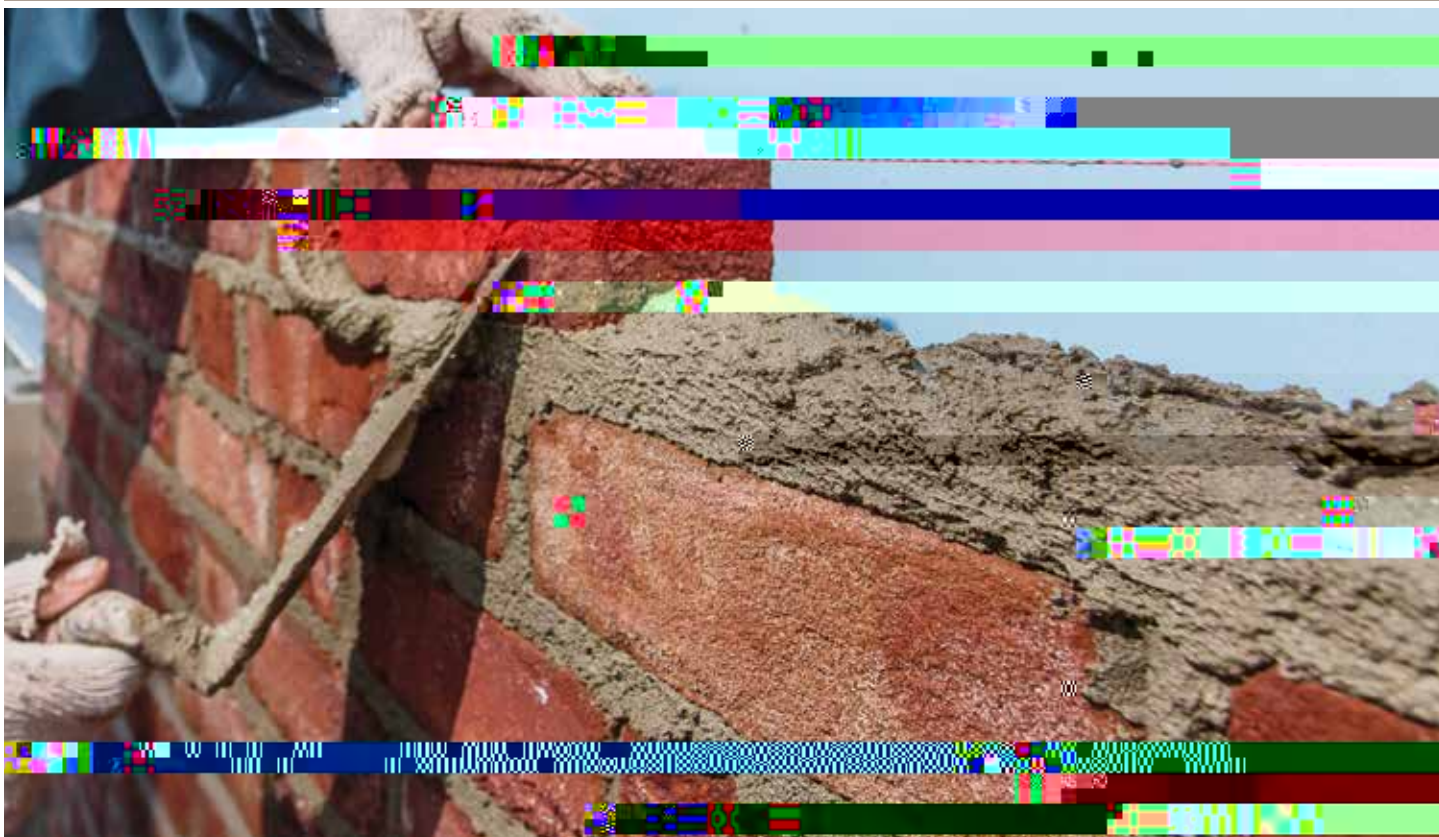

1 &
 , f f ,
 9 f . , , &
 . l &



AVAILABLE
IN COLOR

INSTALLATION/APPLICATION

1. Prepare the substrate by removing all loose material, dust, oil, and grease. The substrate must be clean, dry, and free of any contaminants. If the substrate is concrete, it must be cured for a minimum of 28 days before application. If the substrate is masonry, it must be cured for a minimum of 14 days before application. If the substrate is metal, it must be primed with a compatible primer before application.

2. Mix the product in a clean, dry container. Use a hand mixer or power mixer to mix the product thoroughly. The mixture should be uniform in color and consistency. Do not overmix, as this can cause the product to become too thick and difficult to apply.

3. Apply the mixture to the substrate using a trowel or brush. The thickness of the application will depend on the specific application and the substrate. For most applications, a thickness of 1/4 inch to 1/2 inch is recommended. Apply the mixture in a uniform layer, working from one end of the area to the other.

4. After the mixture has been applied, it should be allowed to cure for a minimum of 24 hours before the substrate is subjected to any load or stress. The curing time may vary depending on the ambient temperature and humidity.

5. Once the mixture has cured, the substrate should be sealed with a compatible sealer to protect the surface from moisture and other environmental factors. The sealer should be applied in a uniform layer, following the manufacturer's instructions.

SIZES AND EQUIPMENT

1. The product is available in two sizes: 36. k and 36. k. The 36. k size is recommended for most applications, while the 36. k size is recommended for larger areas or high-traffic areas.

2. The product should be applied using a trowel or brush. A trowel is recommended for most applications, while a brush is recommended for larger areas or high-traffic areas. The thickness of the application will depend on the specific application and the substrate.

3. The product should be allowed to cure for a minimum of 24 hours before the substrate is subjected to any load or stress. The curing time may vary depending on the ambient temperature and humidity.

MIXING INSTRUCTIONS

WEAR IMPERVIOUS GLOVES, EYE PROTECTION, AND RESPIRATORY PROTECTION. The product contains chemicals that can be harmful to your health if inhaled or absorbed through the skin. Always wear appropriate safety gear when handling the product.

1. Mix the product in a clean, dry container. Use a hand mixer or power mixer to mix the product thoroughly. The mixture should be uniform in color and consistency. Do not overmix, as this can cause the product to become too thick and difficult to apply.

2. Apply the mixture to the substrate using a trowel or brush. The thickness of the application will depend on the specific application and the substrate. For most applications, a thickness of 1/4 inch to 1/2 inch is recommended. Apply the mixture in a uniform layer, working from one end of the area to the other.

3. After the mixture has been applied, it should be allowed to cure for a minimum of 24 hours before the substrate is subjected to any load or stress. The curing time may vary depending on the ambient temperature and humidity.

TECHNICAL SUPPORT

- CONTACT YOUR LOCAL SPEC MIX® MANUFACTURER
- VISIT WWW.SPECMIX.COM
- CONTACT SPEC MIX®
PHONE: 888-733-2649 FAX: 651-454-5315